



10. Continue the Weave with Cord 1

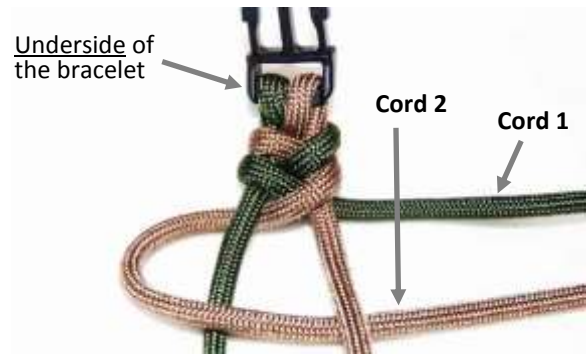

11. Continue the Weave with Cord 2

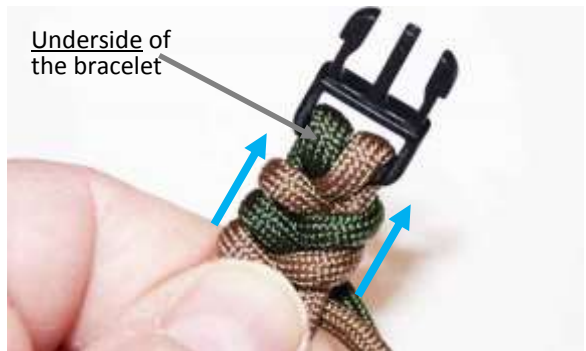


12. Push the Loops Snugly Toward the Male Buckle & Pull the Loose Ends Tight.



13. Double-Check the Bracelet Length

If you can comfortably slip one finger between the bracelet and your wrist, the bracelet length is correct. If the bracelet is too tight or too loose, adjust the length now, start a few braids, and re-check the length.

Repeat Steps 10 and 11 until you get to the other end of the bracelet.

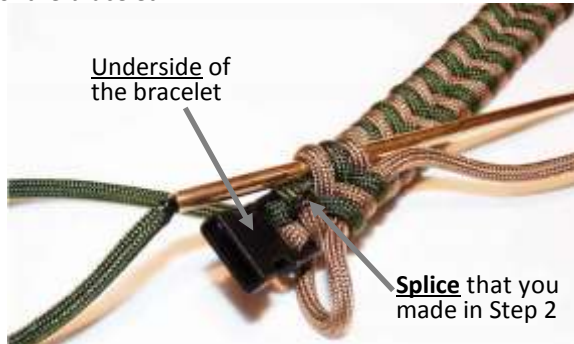

14. Final Check for Bracelet Length & Finish.

If length is correct, pull the loose ends around to the underside of the bracelet and tuck them under 2 or 3 loops using the Paracord Needle, or under the splice that you made in Step 2.



15. Trim the Loose Ends and Wear, Gift or Sell Your Bracelet Proudly! Congratulations!

[Make More Paracord Bracelets! Paracord550MilSpec.com](http://Paracord550MilSpec.com)

# How to Make a 2-Color Fishtail Paracord Bracelet

[Make More Paracord Bracelets! Paracord550MilSpec.com](http://Paracord550MilSpec.com)



[Order More MilSpec Paracord Here](http://Paracord550MilSpec.com)

## Supplies Needed:





**1. Measure Your Wrist**

Wrap a piece of paracord around your wrist. Then measure the paracord to get your wrist size. In this example, we'll make a bracelet for a 7 1/2 " wrist.




**2. Join the 2 Pieces of Paracord Together**

Heat one end of both pieces of Paracord with the lighter for a few seconds. When the ends are melted, carefully press and hold the two ends of paracord together for a few seconds until they cool and fuse together.




**3. On the female half of the buckle, thread both ends of the Paracord from the TOP side of the buckle through to the BOTTOM side of the buckle.**

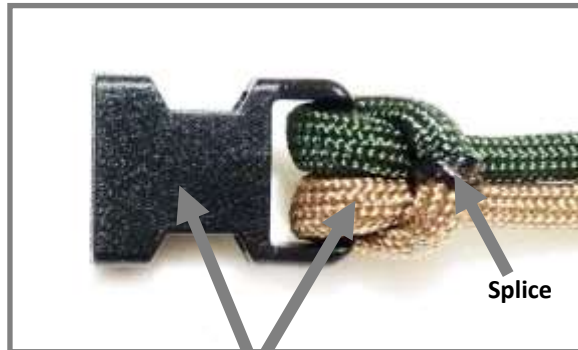


Underside of Bracelet

**4. Thread the Loose Ends Through the Loop & Tighten, Creating a Lark's Head Knot.**

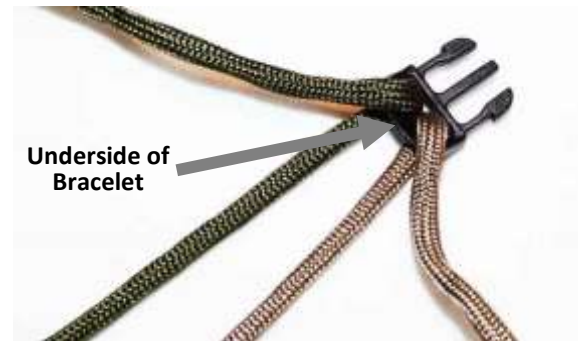


**5. On the male Half of the Buckle, Thread Both Loose Ends from the TOP side to the BOTTOM Side of the Buckle.**

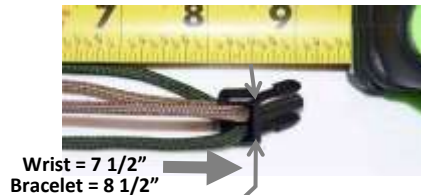


**6. Measure the Bracelet**


Add 1" to the wrist measurement from Step 1. Then measure from one end of the female side of the buckle to the horizontal piece of the male side of the buckle. In this example, the bracelet measurement will be 8 1/2".

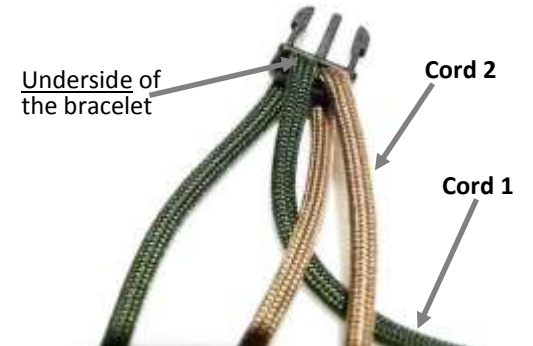

**7. Start the Weave with Cord 1**

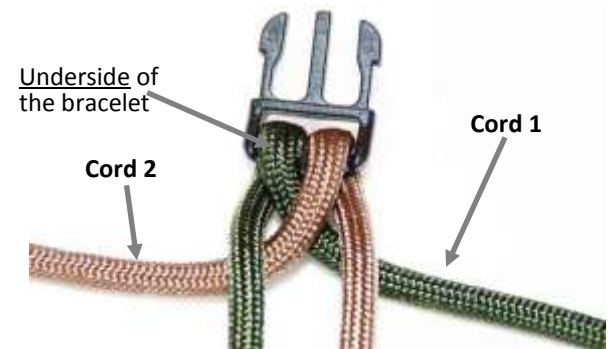

**8. Continue the Weave with Cord 2**

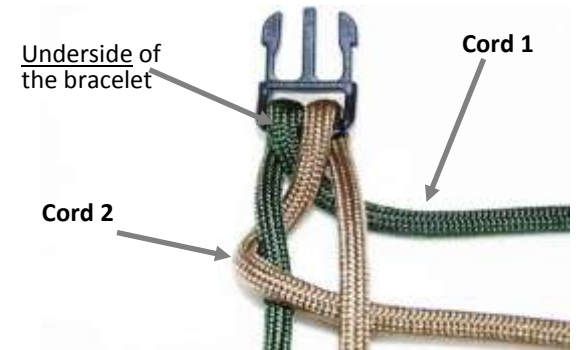

**9. Continue the Weave with Cord 2**